





# Webasto Air Heater Selection Guide

## For the Auxiliary Air Heater That is Right For You


■ Air Top 2000ST     
 ■ Air Top 3500ST

Based on vehicle size and the average temperature, the guide below will help you select the right Webasto air heater.

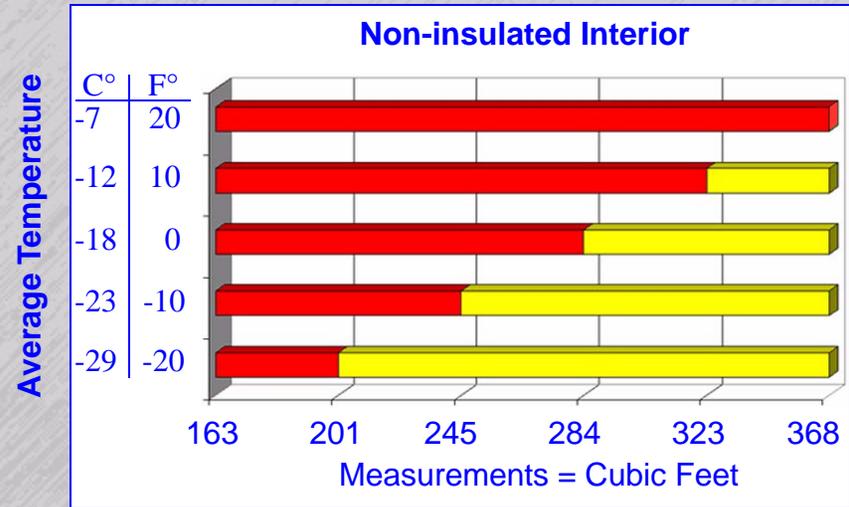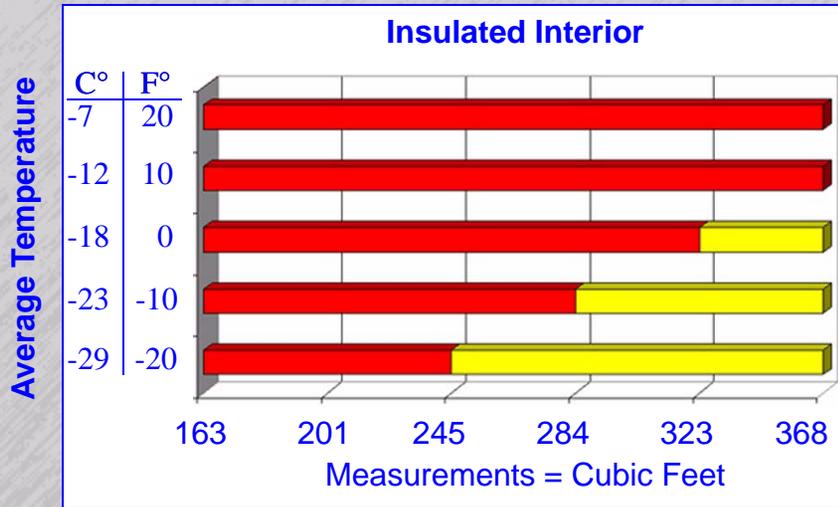

### Est. Rheostat Control Dial Temperature Ranges - AT2000 ST

Range	Fahrenheit	Celsius
1	0° to 45°	0° to 7°
2	46° to 54°	8° to 12°
3	55° to 63°	13° to 17°
4	64° to 71°	18° to 22°
5	72° to 79°	23° to 26°
6	80° to 87°	27° to 30°
7	88° to 95°	31° to 35°

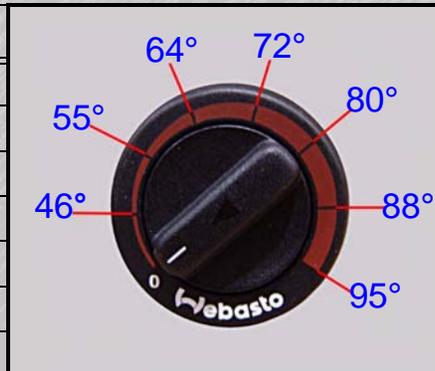

### Quick Reference Sizing Guide

Vehicle Type	Avg. cu. ft.
Pickup - Super Cab	115 cu. ft.
Pickup - Crew Cab	135 cu. ft.
Cargo Van (cargo area)	265 cu. ft.
Sprinter Mega Van	545 cu. ft.

**Note:** Cubic Feet = H x W x L

**Note:** The table above identifies the calculated temperature ranges of the rheostat control dial. The temperature ranges may differ slightly for each control dial due to the tolerances in resistance values of each rheostat.